



# MVHS UNDERWATER ROBOTS

## KEYBOARD / GAMEPAD CONTROLS



Control	Keyboard	Gamepad
Heads-up Menu	e	START
Lasers	l	
Lights	i	
Lights...Brighten	p	D-Pad Up
Lights...Dimmer	o	D-Pad Down
Camera Tilt...Down	z	A
Camera Tilt...Centre	a	B
Camera Tilt...Up	q	Y
Power Level...Increase		
Move...Forward	Up	
Move...Backwards	Down	
Move...Left	Left	
Move...Right	Right	
Move...Up	Shift	
Move...Down	Ctrl	
Move...Left Lift		Left Pad X
Move...Port Throttle		Left Pad Y
Move...Right Lift		Right Pad X
Move...Starboard Throttle		Right Pad Y
Power On Motors	[	
Power Off Motors	]	
Power Levels	1, 2, 3, 4, 5	
Toggle Heading Hold	m	
Toggle Depth Hold	n	
Toggle Serial Monitor	u	
Toggle Fly By Wire	g	
Toggle FPS Counter	f	
Toggle Tank Control	t	
Toggle Heads-Up Display	\	
Blackbox Record	r	
Snapshot	c	LB
Telemetry Text Color	h	